


XT Series Dehydrator Slave Unit Connection



XT Series Master/Slave Redundant Dehydrator



Route master unit cable from door connection up through exit hole on top of master unit. Use clamps and tie wraps to dress wires.

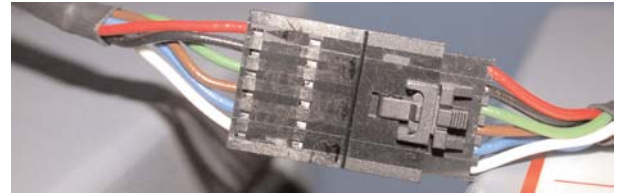


Connect master unit cable to slave cable (included with slave unit). Connection is outside of both units.




Connect master unit cable included with slave unit to "COMP 2" connection on master unit door.

XT Series Dehydrator Slave Unit

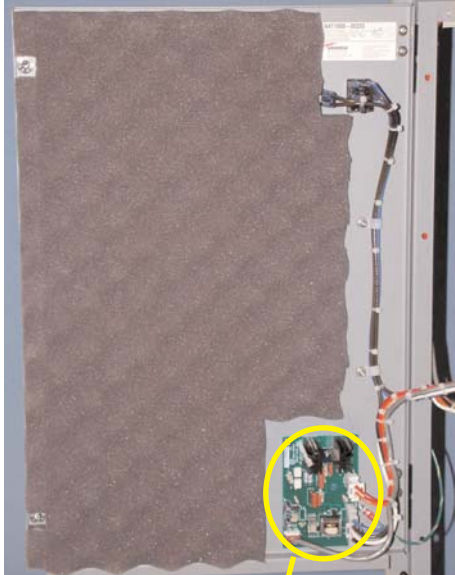

Slave unit cable connection (for reference, factory installed).

Connect air lines

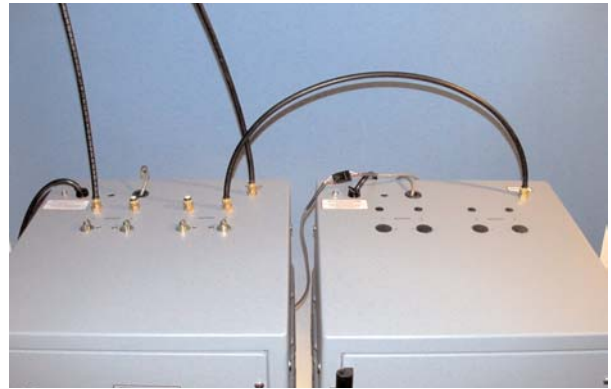

Method A

Connect slave unit output to master unit output. Use other master unit outputs to transmission lines.

Note: Be sure to connect the master "Remote Sense" line to the transmission line for proper operation. When connecting the slave unit to the master, open the valve controlling that port. The valve must remain open when slave unit is connected to the system.



Method B

Connect master/slave outputs together using tee fitting to supply transmission lines.



Andrew Corporation
10500 West 153rd Street
Orland Park, IL U.S.A. 60462
www.andrew.com

AE01B-A0513-001

Telephone: 708/349-3300
FAX (U.S.A.): 1-800-349-5444

Customer Service, 24 hours:
North America: 1-800-255-1479
U.K.: 0800 250055
Europe, Africa & Middle East: +44 1592 782 612

Rev: -