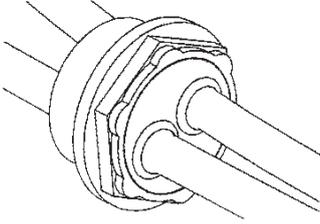
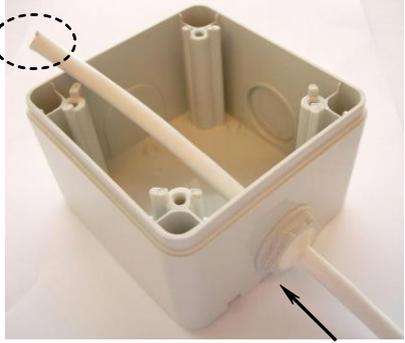
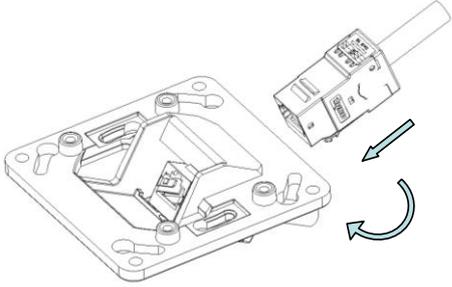
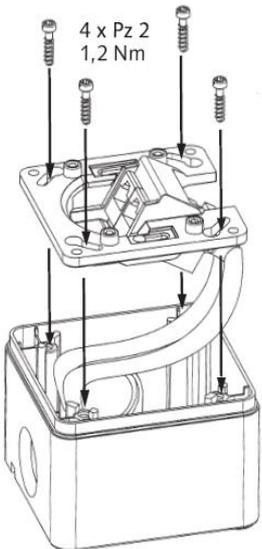


## AMP NETCONNECT®: IP 44 Industrial Outlet for SL Series and AMP-TWIST Jack

### 1. INTRODUCTION.

This Instruction sheet describes assembly procedures for IP 44 Industrial Outlet and SL series Jack and AMP-TWIST Series Jack.

The IP 44 Industrial Outlet accepts UTP SL Jack (PN 1375055-X), AMP-TWIST-6S SL Jack (1711342-X) and AMP-TWIST 6<sub>A</sub>S SL Jack (PN 1711716-X).

<p><b>1</b></p> <p>Cable (or cables) through membrane to keep IP-degree</p> 	<p><b>2</b></p> 
<p><b>3</b></p> <p>Terminate the connector using relevant Instruction sheet: 411-93007, 411-93016 or 408-8417. (depending on the connector used)</p> 	<p><b>4</b></p> 
<p><b>5</b></p> <p>4 x Pz 2 1,2 Nm</p> 	<p><b>6</b></p> <p>4 x Pz 2 1,2 Nm</p> 