


NG4access ODF Platform Universal E-Series Chassis

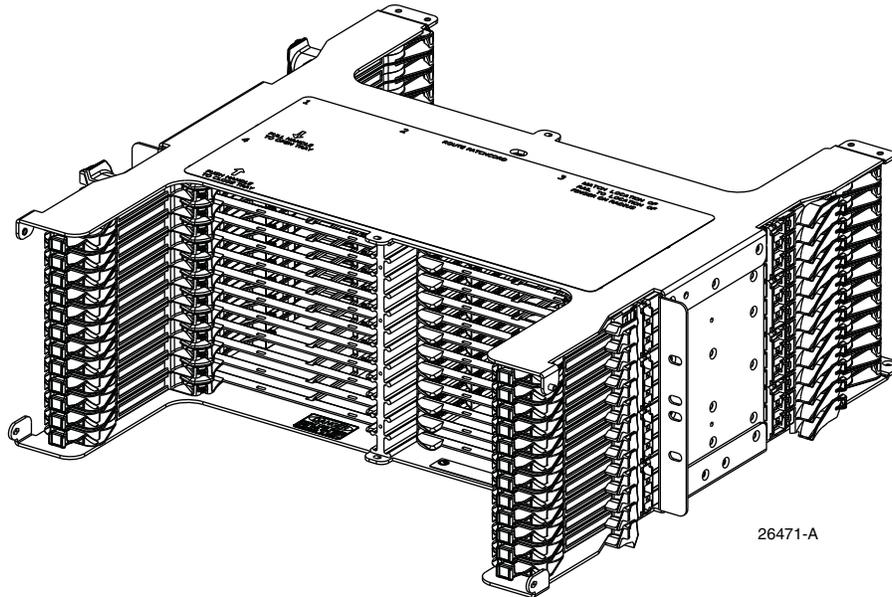

Content	Page
INTRODUCTION	1
1 PRODUCT DESCRIPTION	2
2 MAIN COMPONENTS	3
3 GROUNDING AND BONDING THE CHASSIS	4
4 CHASSIS INSTALLATION PROCEDURE	4
5 WHERE TO FIND OTHER INFORMATION	6
5.1 Adapter Pack and Module Installation Instructions	6
5.2 Routing of Cables, Fibers, and Patch Cords	6
5.3 Product Support	6

INTRODUCTION

This installation manual describes the NG4access ODF Platform Universal E-Series Chassis and provides all information needed to install this product. This product is intended to be used in a Network Telecommunication Facilities and is suitable for installation in an Integrated Bonding Network or a Common Bonding Network.

Revision History

ISSUE	DATE	REASON FOR CHANGE
1	June 2017	Original.

Trademark Information

Commscope (logo) and CommScope are trademarks.

Admonishments

Admonishments — in the form of Dangers, Warnings, and Cautions — must be followed at all times. These warnings are flagged by use of the triangular alert icon, shown below.



Danger: *Danger is used to indicate the presence of a hazard that will cause severe personal injury, death, or substantial property damage if the hazard is not avoided.*



Warning: *Warning is used to indicate the presence of a hazard that may cause severe personal injury, death, or substantial property damage if the hazard is not avoided.*



Caution: *Caution is used to indicate the presence of a hazard that will or may cause minor personal injury or property damage if the hazard is not avoided.*

General Warning and Caution Statements



Danger: *Avoid eye exposure to unmated connectors. Unmated connectors may emit invisible laser radiation. Do not look directly into the end of a connector or an adapter port. Do not inspect with a magnifying device. To ensure safety, maintain caps on unmated connectors at all times.*



Caution: *Handle cables with care. Fiber optic cable stubs should be handled with care throughout the installation procedure to avoid kinking and damage to cables.*

1 PRODUCT DESCRIPTION

The NG4access universal E-series chassis is a 19-inch (48.26 cm) rack-mount, high-density fiber optic panel providing up to 576 terminations using LC adapters (or 288 SC terminations). A NG4access frame fully loaded with six universal chassis provides 3456 LC terminations per frame in a GR-449 compliant footprint.

The chassis has features providing quick and easy access for connection and routing of fibers.

- Universal LC or SC adapter packs may be used with singlemode or multi-mode, APC or UPC connectors. LC packs have 12 adapters per pack (24 per access tray). SC packs have six adapters per pack (12 per access tray).
- Access trays may be moved toward front or rear to provide easy access to adapters from the front or rear side of the frame.

- Access trays may also be loaded with cabled modules that snap into position. Each cabled module is pre-terminated with 24 LC or 12 SC adapter/connectors and fibers. Snap-in MPO and VAM modules are also available.
- Routing guides manage the fibers within the chassis, allowing an access tray to be opened or closed with no pulling or pinching of fibers.

2 MAIN COMPONENTS

Figure 1 shows the main components of the universal E-series chassis. They are as follows:

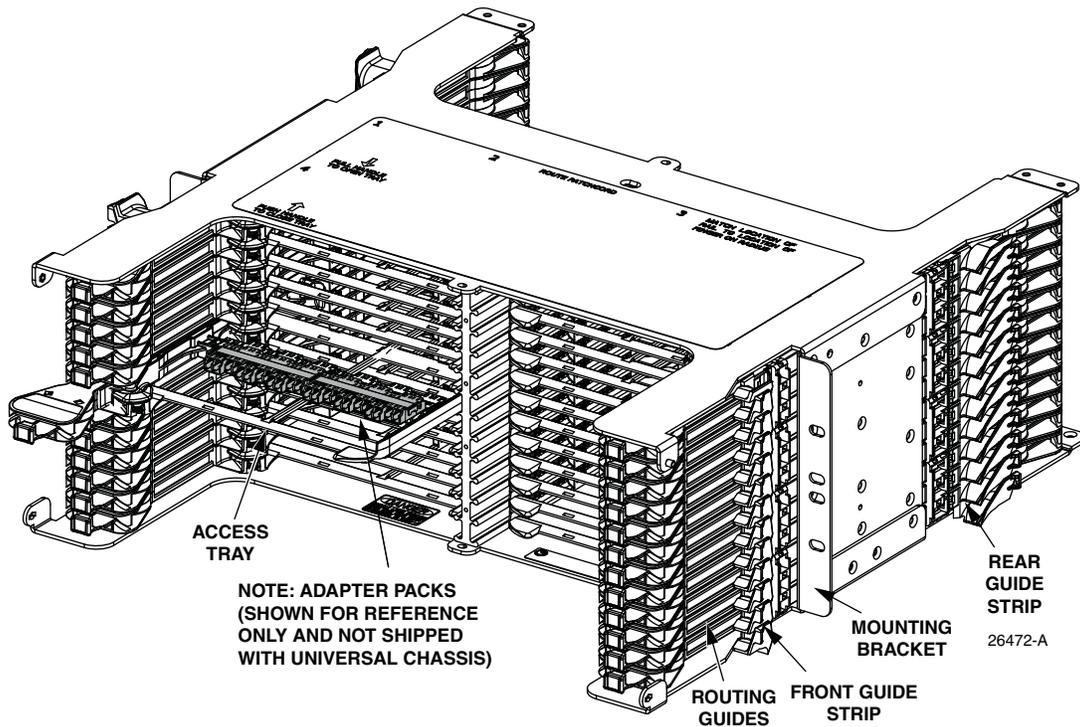


Figure 1. Main Components of NG4access Universal E-Series Chassis

- **Access Tray**—may be moved toward front or rear to provide front or rear access to adapter packs with the associated fibers and connectors. In place of adapter packs, each access tray may hold a snap-in cabled module, MPO module, or VAM module.
- **Universal Adapter Pack (LC or SC)**—may be used with singlemode or multi-mode, APC or UPC connectors. LC packs have 24 adapters. SC packs have 12 adapters,
- **Routing Guide**—holds fibers in an optimal route when access trays are moved toward the front or rear of the chassis.
- **Mounting Tab**—provides a physical interface for mounting the chassis on a frame. The tabs hold four mounting screws, two on each side.

- **Guide Strip**—provides cable management for fibers routed into the chassis on the front or rear of the frame.

3 GROUNDING AND BONDING THE CHASSIS

The universal E-series chassis uses thread-forming mounting screws to provide an electrical path between the chassis and the metalwork in which it is mounted. It is required that nonconductive coatings must be removed on the mating metal surfaces. Before installation the mating surfaces must be cleaned and coated with an antioxidant. Always consult and conform to local regulations when grounding and bonding this product.

4 CHASSIS INSTALLATION PROCEDURE

1. Identify the frame location where chassis will be installed. Prepare area around mounting holes to provide a proper ground (remove paint, clean, and coat with rust preventative).
2. Install screws and star washers into the two left side holes on the rack to hang the chassis on the rack, then install screws and washers in the right two holes. See [Figure 2](#).

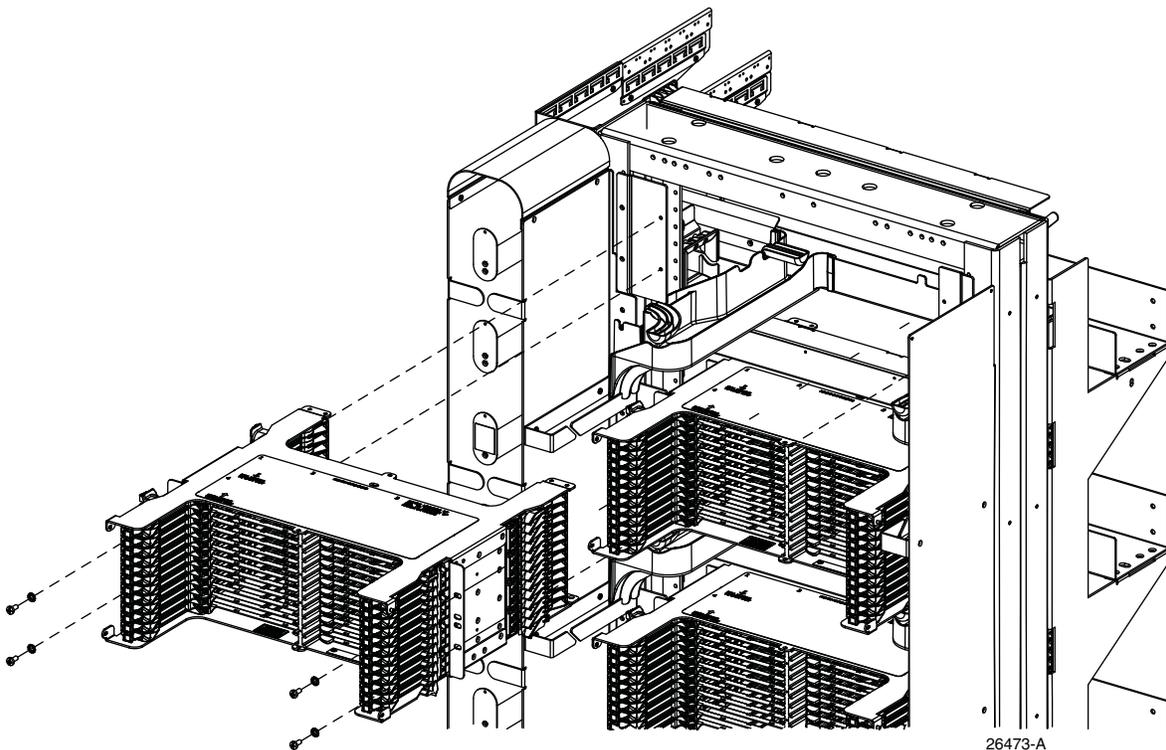


Figure 2. Installing Chassis in Frame

► **Note:** The frame has six locations for mounting of the chassis.

3. Install guide strips (provided) on front and rear of chassis. To install a strip, align the tabs on the strip with the slots on the chassis as shown in rear view in [Figure 3](#), then press the radius limiters into place as shown. Repeat for all four locations.

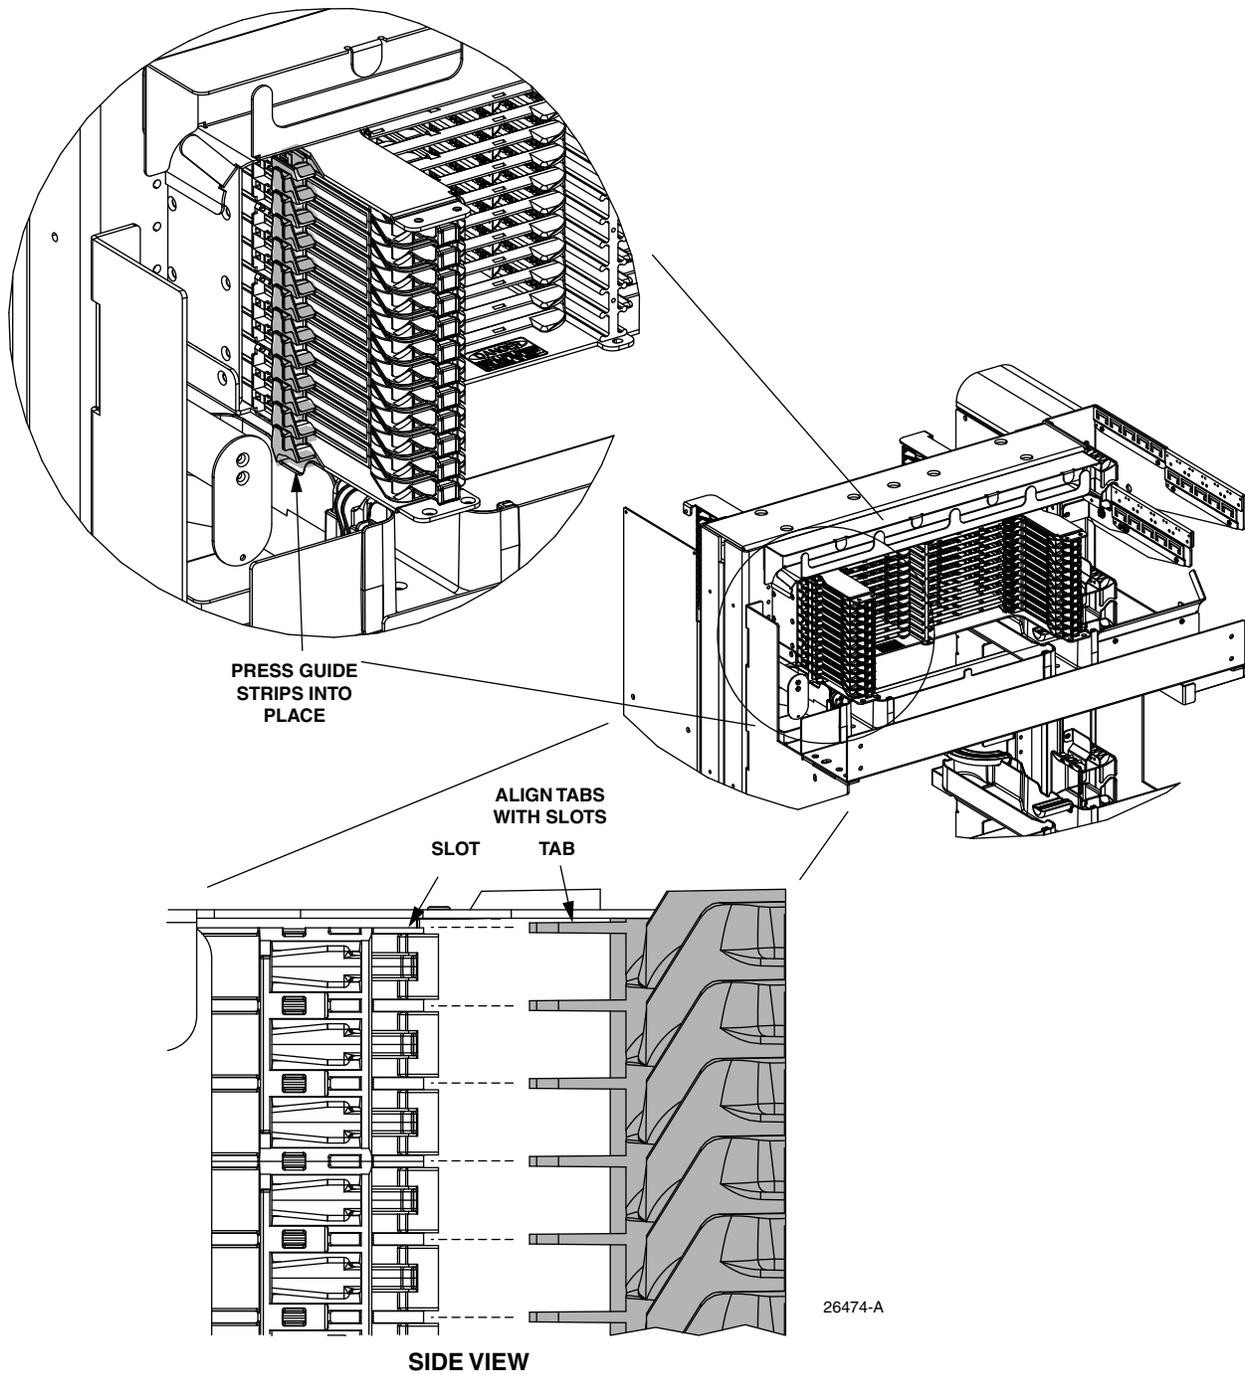


Figure 3. Installing Guide Strip On Universal E-Series Chassis

5 WHERE TO FIND OTHER INFORMATION

5.1 Adapter Pack and Module Installation Instructions

For adapter pack installation instructions, refer to the laminated cards hanging on the front or rear of the frame.

For module installation instructions, refer to the laminated cards hanging on the rear of the frame.

5.2 Routing of Cables, Fibers, and Patch Cords

► **Note:** This product is designed for use with RBR (Reduced Bend Radius) fiber.

For cable routing on the rear of the frame, refer to the laminated cards hanging on the rear of the frame. For patch cord routing, refer to the laminated cards hanging on the front of the frame.

5.3 Product Support

<http://www.commscope.com/SupportCenter>

