
Installation Instructions Dehydrator Connection to

Transmission Line



Installation accessory kit that allows the unit to mount parallel to a transmission line flange.

Apply PFTE tape to the male threads (if not pre-applied) and assemble in a stack: Street Elbow and Male Connector as shown below. Use a 9/16" or adjustable wrench to tighten the stack.

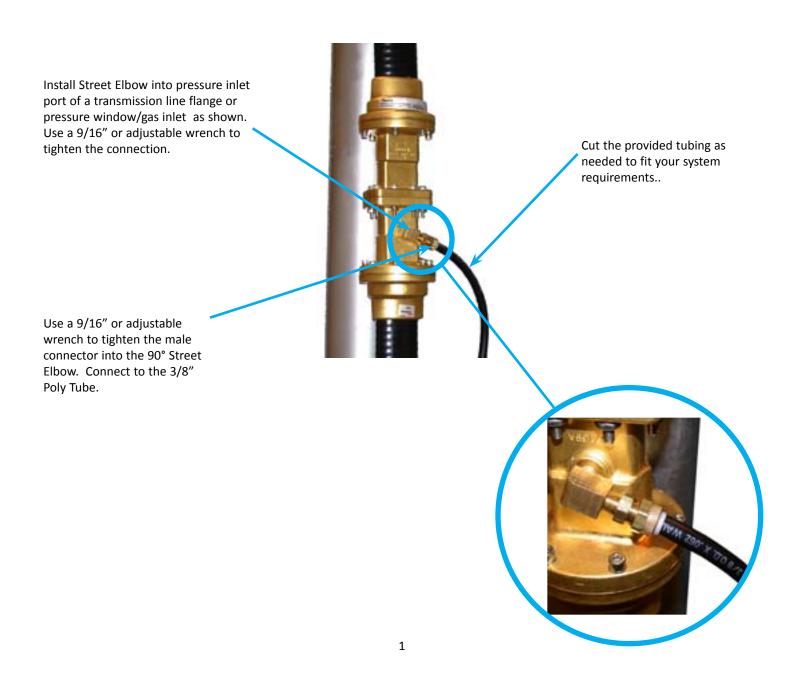



Customer Support Center From North America Telephone: 1-800-255-1479 Fax (U.S.A.): 1-800-349-5444 International Telephone: +1-779-435-6500 Fax Number: +1-779-435-8579 Web Access Internet: www.commscope.com Email: #prc@commscope.com

All designs, specifi

Bulletin AE01B-A0568-001 Rev C (05/14)

All designs, specifications and availability of products and services presented in this bulletin are subject to change without notice.

© 2010 - 2014 CommScope, Inc. All rights reserved

Andrew Corporation, 3 Westbrook Corporate Center, Suite 900 Westchester, IL 60154 USA