

TC-10874P
Rev A, Mar 2017
www.commscope.com

Building distributor

Introduction


The Budi is a building distributor for a fiber management system that offers the functions of splicing. Provides a mechanical and environmental protection for the fiber optic components.

Kit content



- Box

Accessories

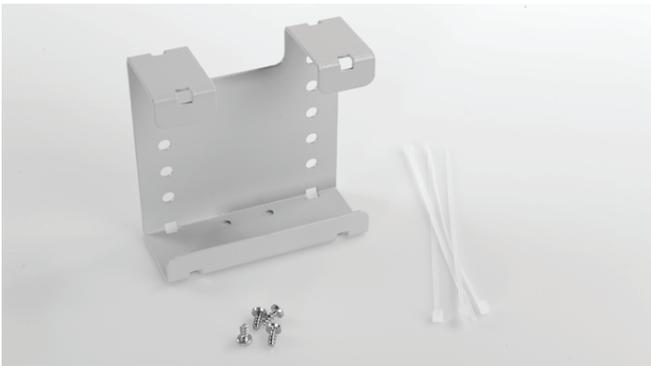

- Loop bracket
Loop of 8 loose tubes (ø 2.4 mm).
Maximum window of 2.6 m.

Seals

Wrap around cable seals

Sealblock 6 x 10 mm

Cable diameter (mm)	Foam (± 5 mm)
3	95
4	90
5	80
6	75
7	70
8	60
9	50
10	40

Sealblock 6 x 15 mm

Cable diameter (mm)	Foam (± 5 mm)
9	125
10	115
11	105
12	95
13	85
14	70
15	60

Sealblock 3 x 20 mm

Cable diameter (mm)	Foam (± 5 mm)
14	155
15	140
16	125
17	110
18	95
19	85
20	75

Sealblock 24 x 8 mm

Cable range 1.8 – 7 mm

Sealblock rubber 1 x 18




To use in ports S6-S7 only
Cable range 3 – 18 mm

Pigtail seal 48


Standard seals

PG 16
PG 21
PG 29
PG 29 (PTS 24)

1 Preparation of the box

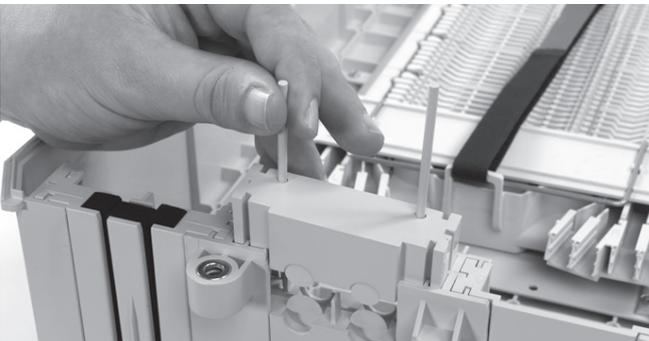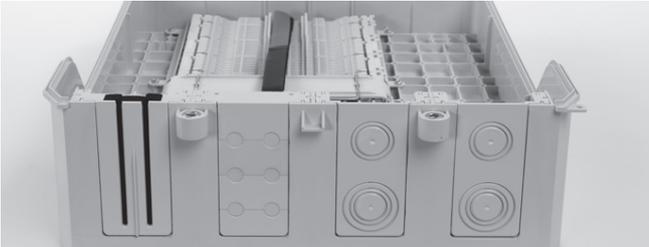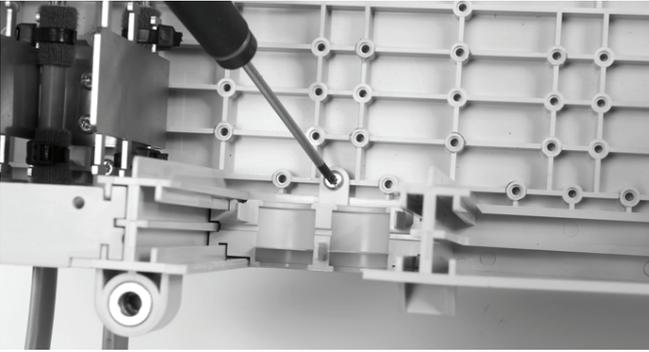


1.1 Different wrap-around ports are available (including brackets). Use two guiding pins to open the ports and to secure the bottom part to the box. Cut out the plastic part if you want to install a cable.


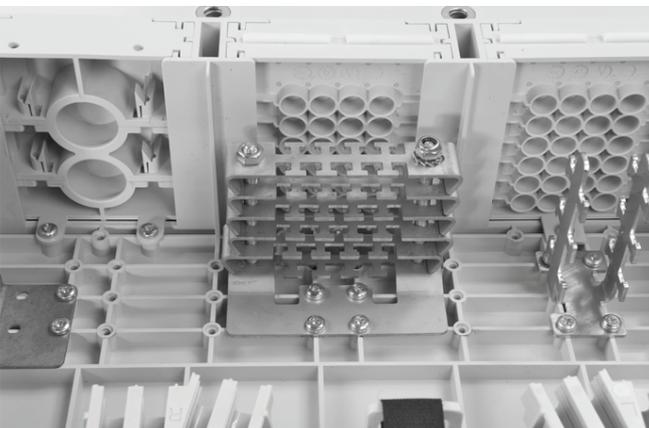



1.2 Install the cable bracket depending the cable seal.

2 Looped feeder cable


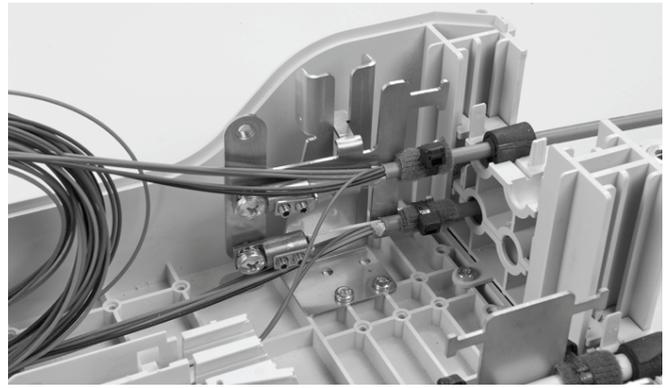


2.1 Install the looped cable into the ports.

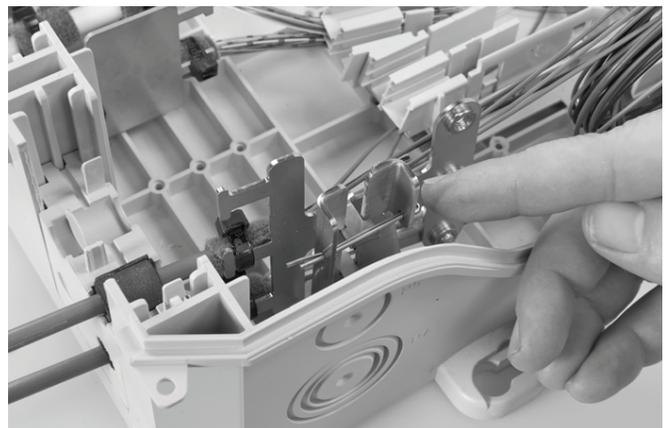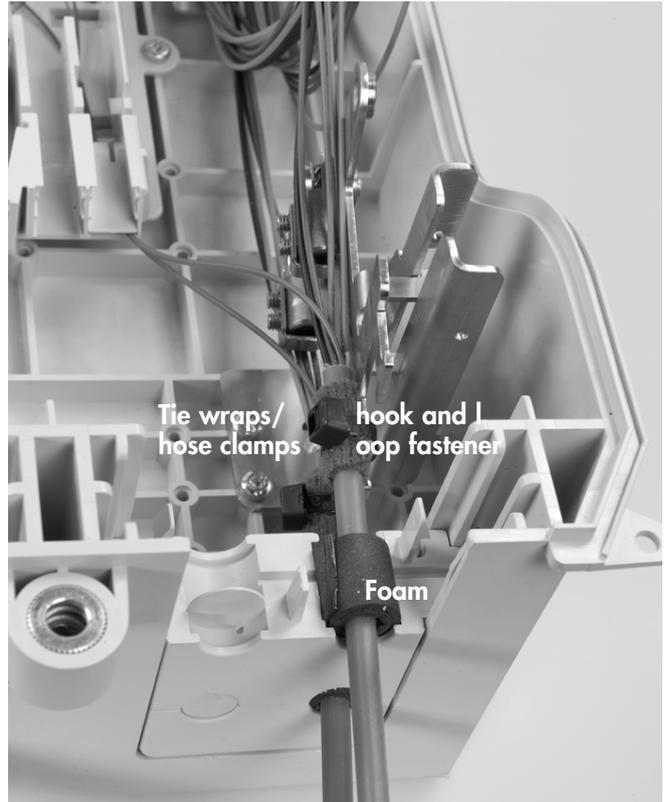


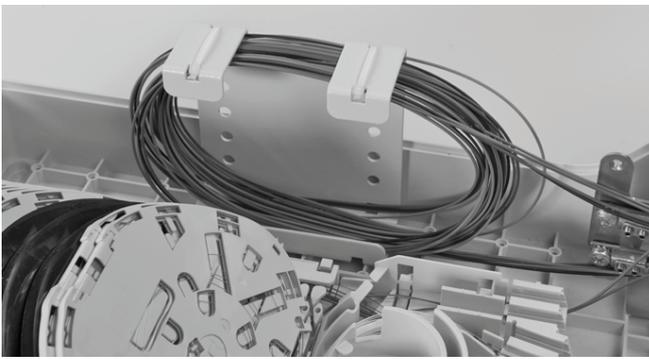

2.2 Store the looped tubes into the loop bracket.

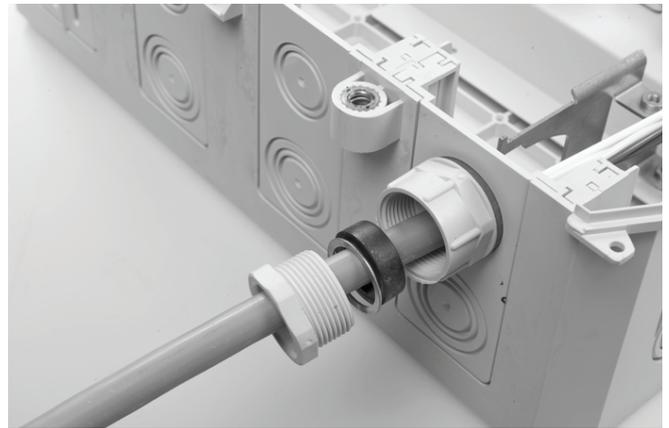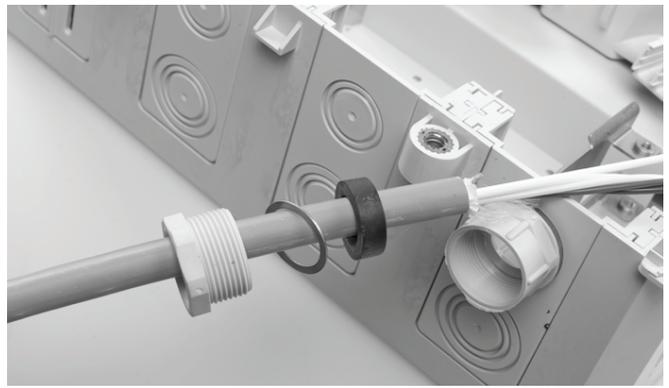


3.3 Prepare the feeder cable and insert the cable into the box.

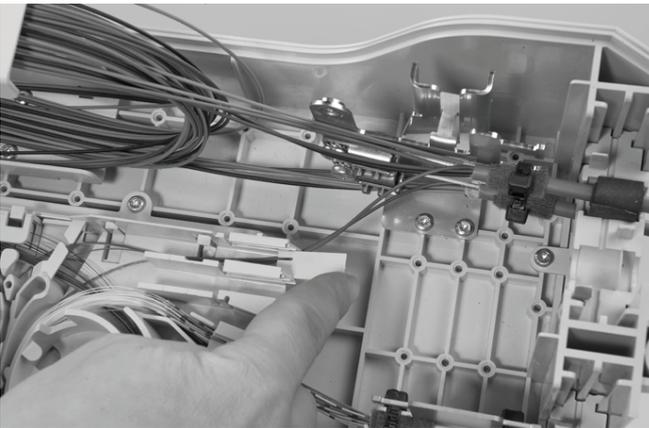

2.3 Route the loose tube towards the FAS block.


3 Installation of the feeder cable

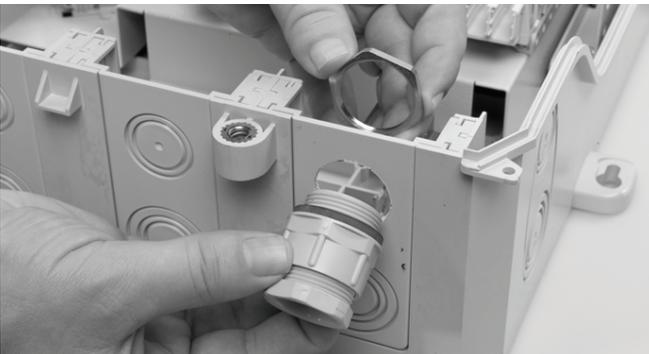

3.1 Install the PG21 into the port.



3.4 Install the cable onto the bracket, secure with hook and loop fastener and secure the aramid yarns if needed.

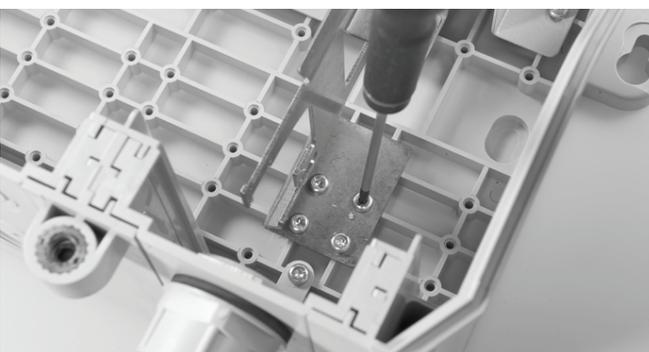


3.2 Install the cable bracket into the box..




3.5 Route the unused loose tubes towards the loop bracket for storage. Secure with te-wraps when needed.




3.6 Route the loose tube towards the tube holder and strip.

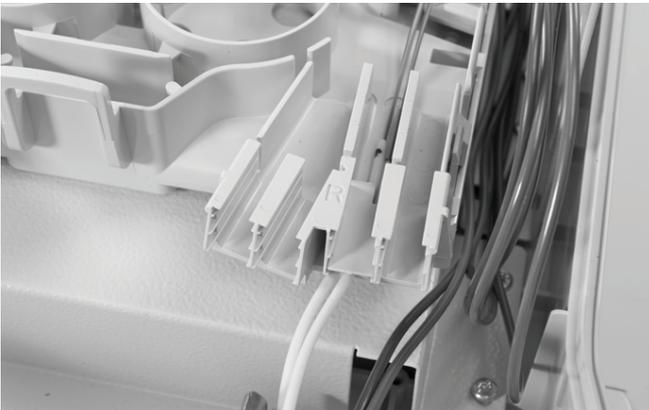


4 Fiber routing

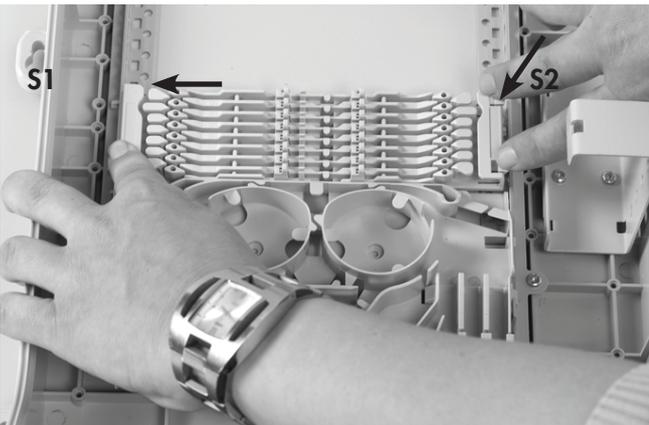


4.1 Secure the wraparound groove plate on the UMS by putting the plate with the long protrusions in the S1 UMS-profile and sliding the plate in the S2 UMS-profile until it snaps. (Do not leave gaps between groove plates).

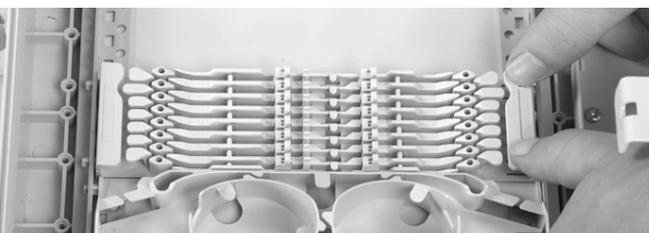


4.2 To remove push the two snapfits at S2 UMS-profile and slide the wraparound plate towards S1 UMS-profile.

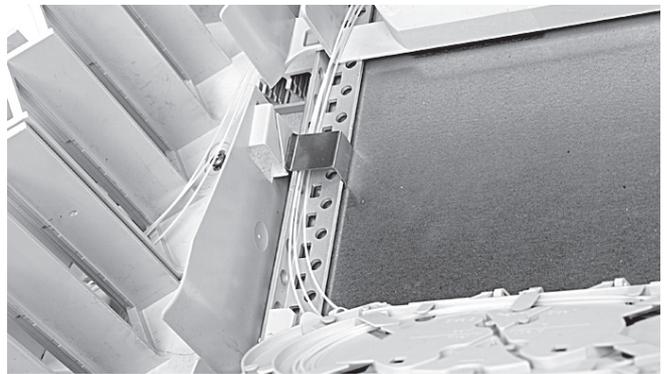


4.3 If box is not completely filled with groove plates, use pigtail clip retainer to hold the pigtails in place in the open area.

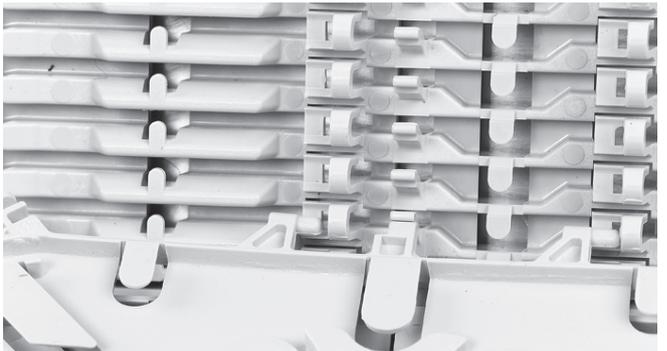


4.4 Place a tray in the wraparound groove plate; do this by pushing the lip on the groove plate (lowest possible position) slightly down with the tray and move the tray lateral into the hinge-cavities of the groove plate. To snap the High Capacity Single Element tray (HCSE) in the W/a single fiber groove plate leave always one hinge facility open between Fasblock or previous tray and the HCSE-tray.

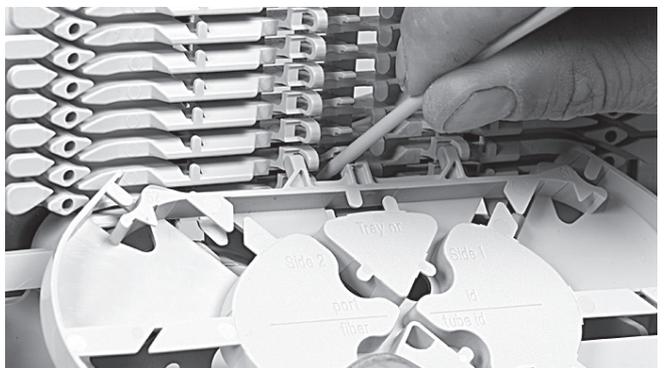


4.5 To remove the tray put the fiber guiding pin between lip on wraparound groove plate and tray and move lateral towards S1.

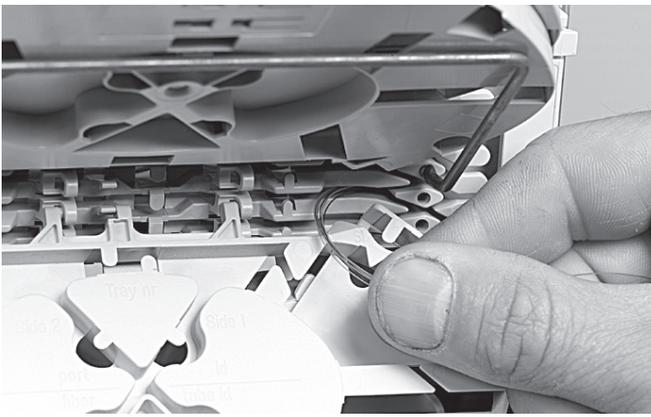

4.6 Position the wedge carefully such that the groove is still accessible for the fibers and be careful not to push the wedge against fibers. To remove the wedge, use two hands to pull on both ends (near the groove plate). Route the fiber in the grooves of the wraparound groove plates to the entrance of the identified tray. Fiber must be routed in the groove below the hinge of the tray!

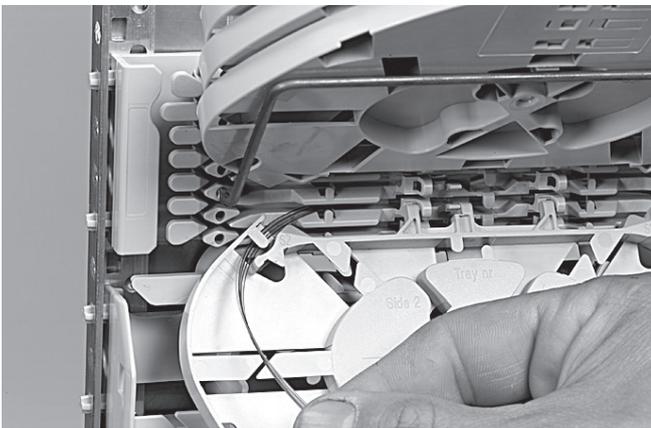

4.7 Pull gently on the fibers in the tray and make sure that the fibers are well contained in the routing block and wraparound groove plate.

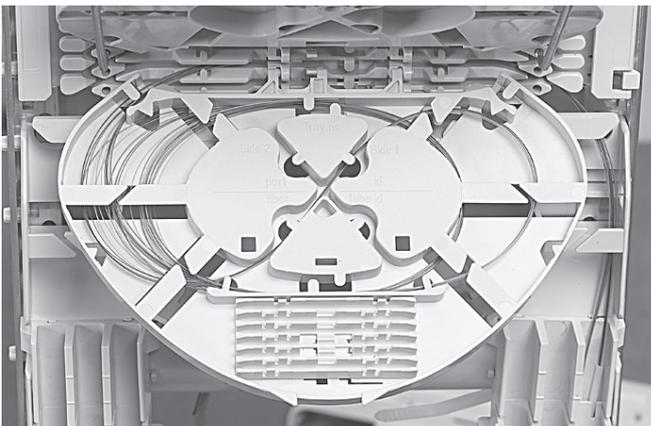


4.8 Store the fibers temporarily on a tray (picture shows the case of a loopback).


4.9 Storing dark fibers can be done in different ways.

- 1) Organise dark fibers into the different trays, following instructions as described.
- 2) Organise dark fibers together into the first available tray (i.e. with a max. of 24 cut or 12 loops primary coated fibers in one SE-tray).


5 Trays

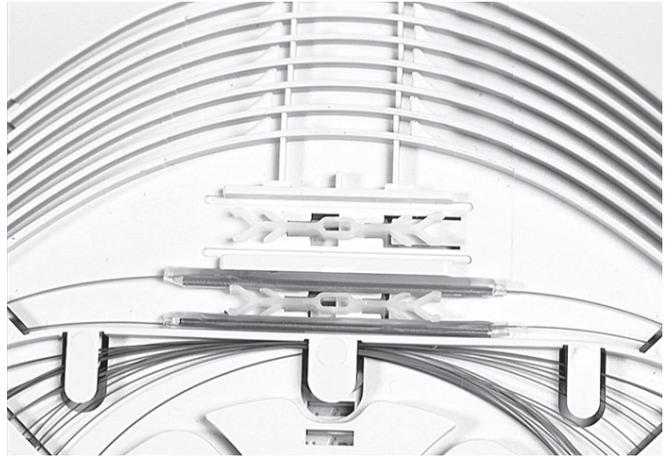


5.1 SMOUV in SC tray.

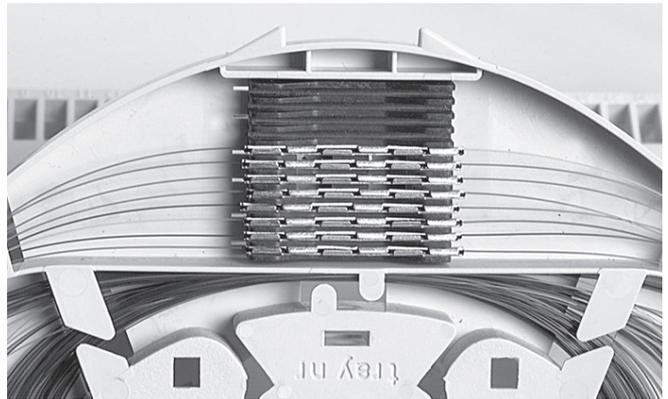


5.2 ANT in SE tray.

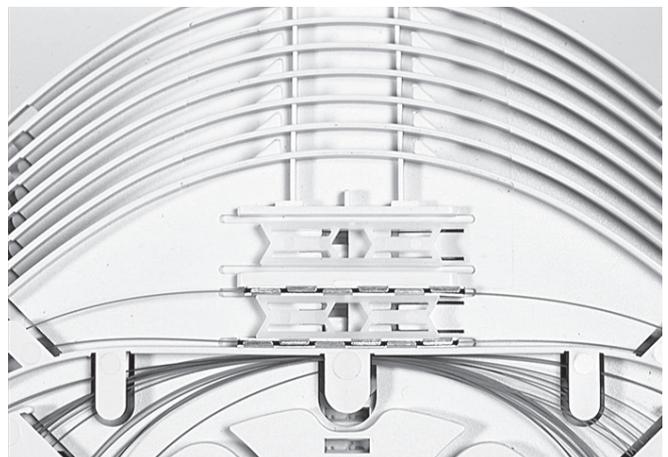


5.3 ANT in SC tray.

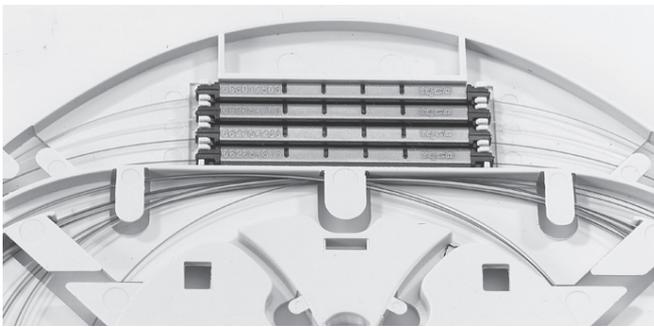


5.4 RECORDsplice in SC tray.

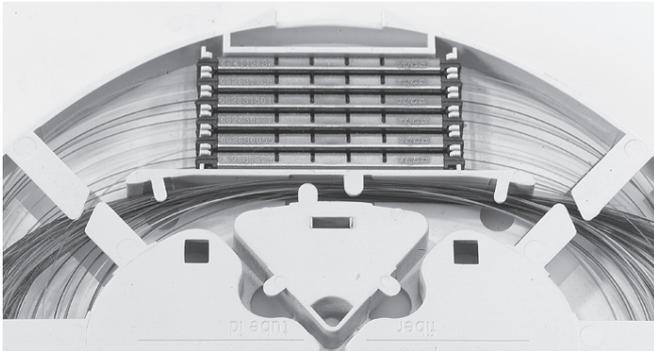


5.5 RECORDsplice in SE tray.

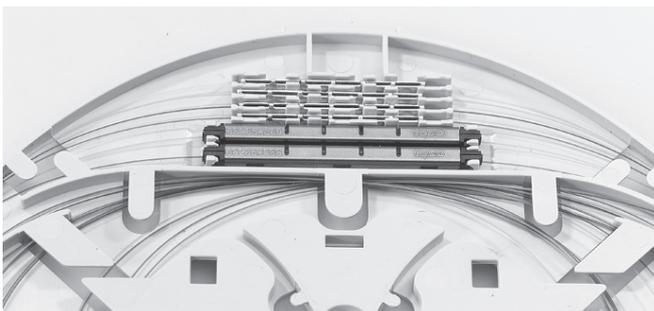


5.6 RECORDsplice/ANT in SC tray.

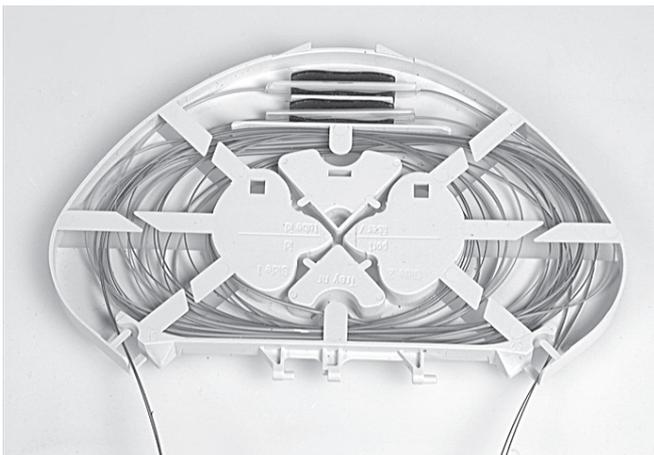

5.7 Ribbon 4/8 tray.


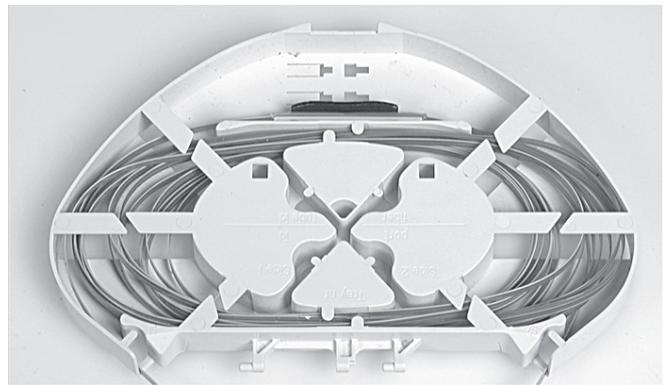


5.8 Ribbon 12 tray.






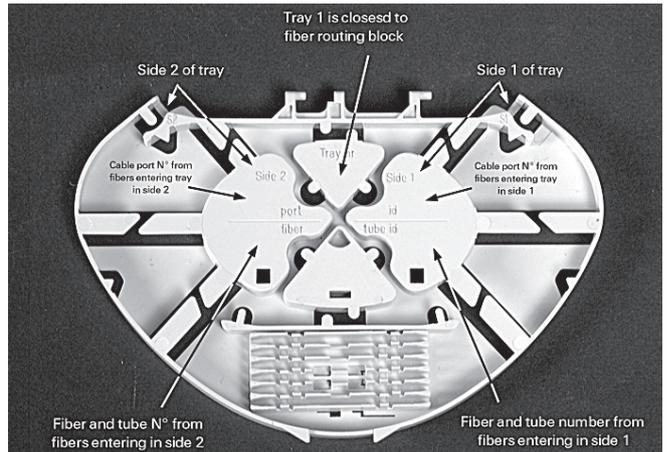


5.9 Use a permanent marker to write on the tray.


6 Patch panel TA/TP

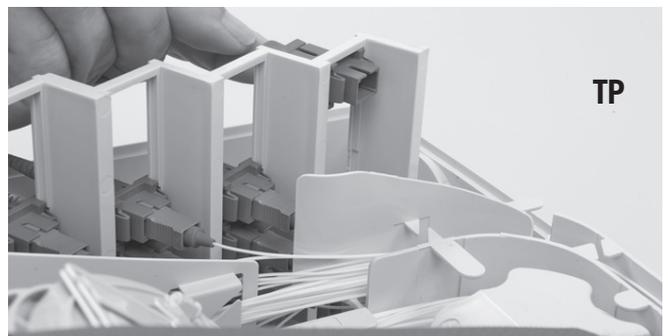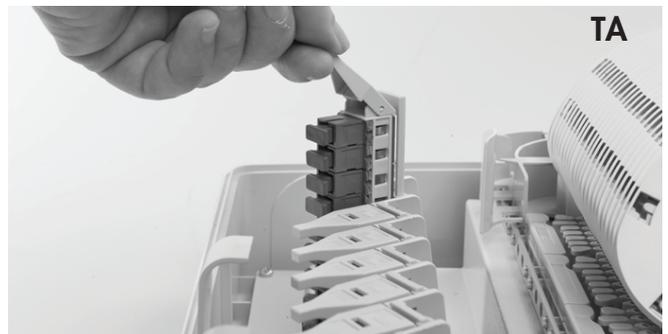

6.1 Slide the patch panel upwards up till the first locking position, not further.

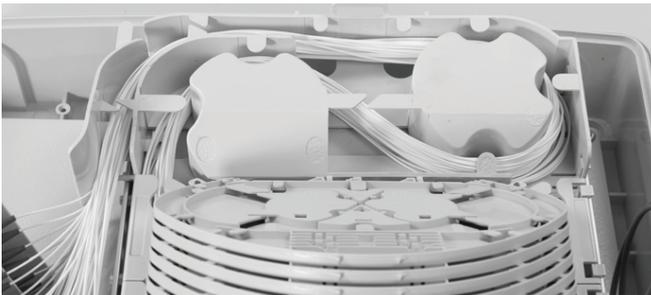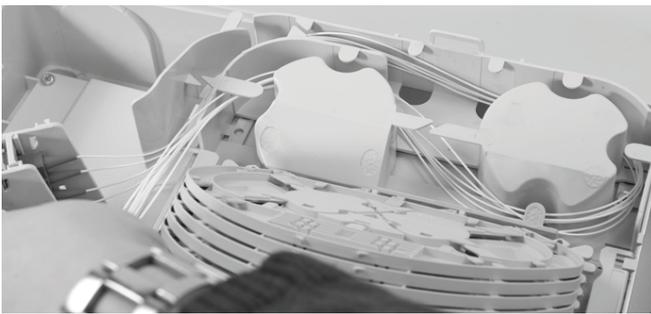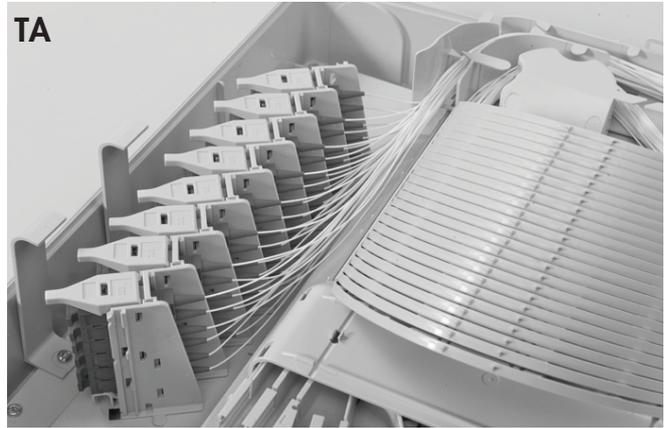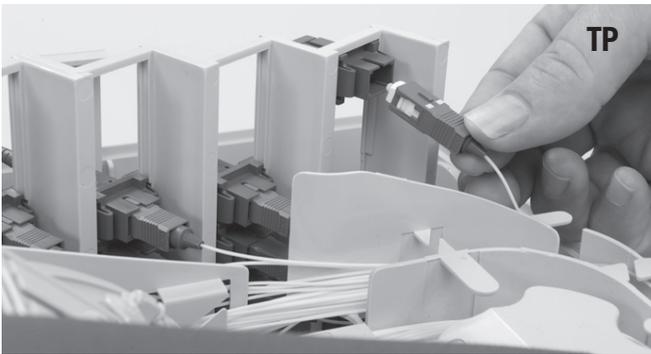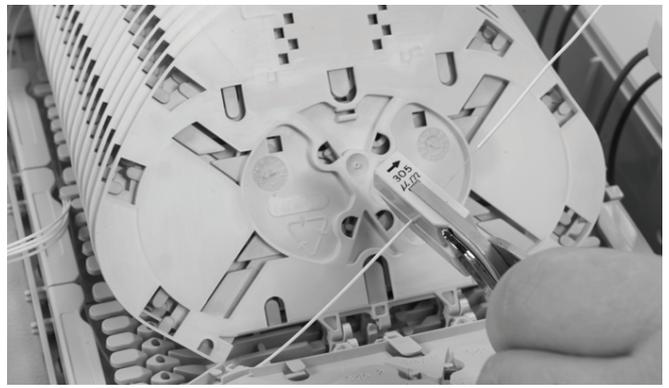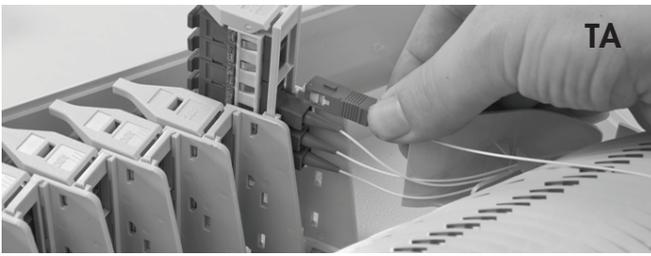

6.2 Install the pigtails into the designated adaptors.

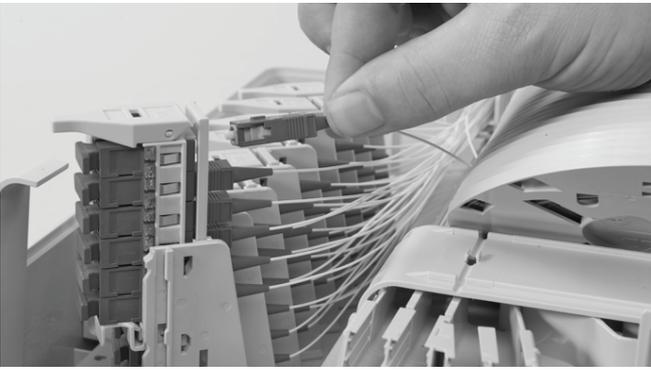


6.3 Route the pigtails towards the tube holder, different grooves can be used to separate the bundle of pigtails if needed.


7 Connecting customers







7.1 Slide the patch panel upwards until the first locking position, not further. Connect the pigtail/patch cord into the designated adaptor.

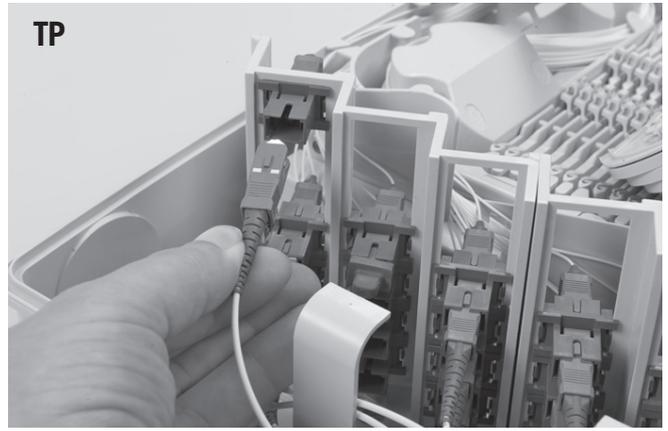

7.2 Once the top row of pigtails is installed, the pigtails can be routed towards the pigtail seal. Insert one by one into the groove.

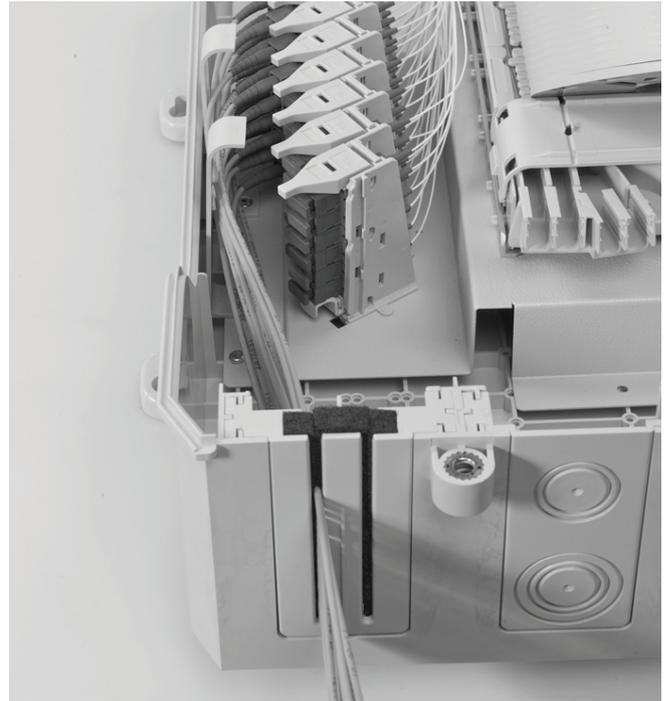


7.3 Top rows can be installed in the first groove.

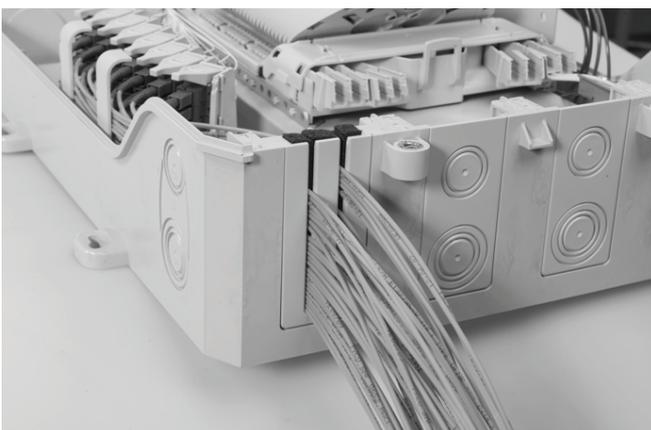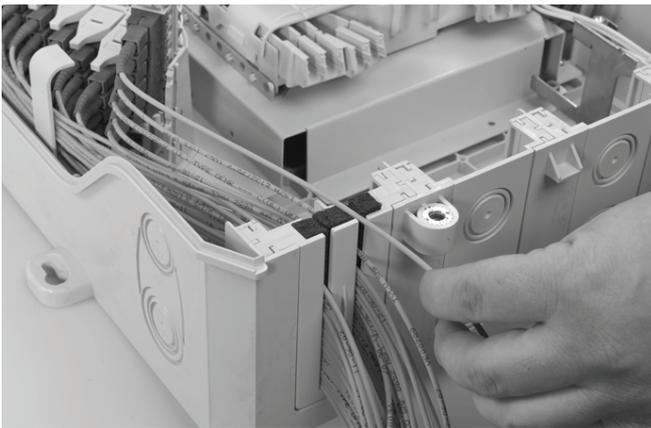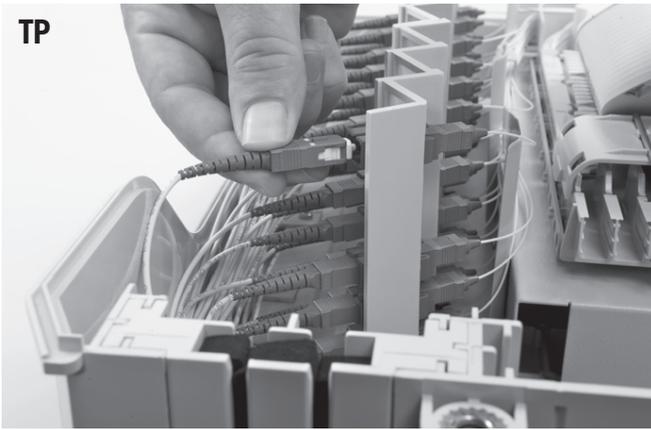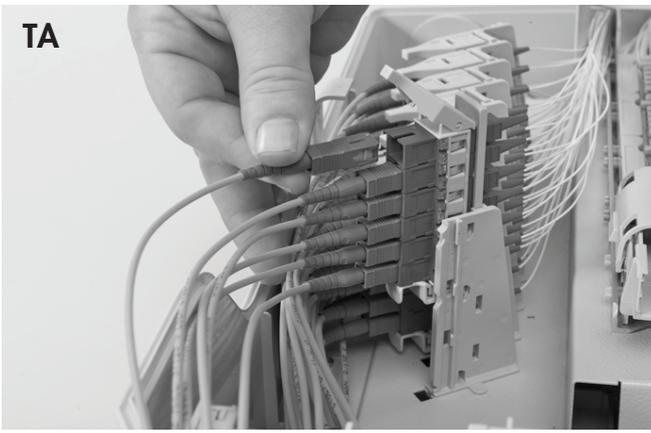


7.4 Bottom can be installed second groove.

8 Closing the box

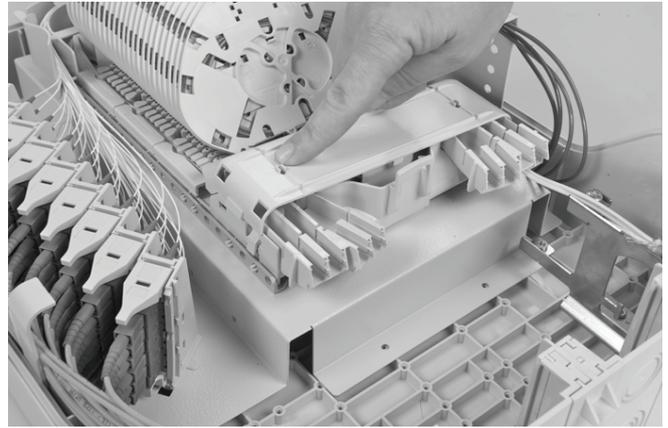

8.1 Close the FAS block with the cover.

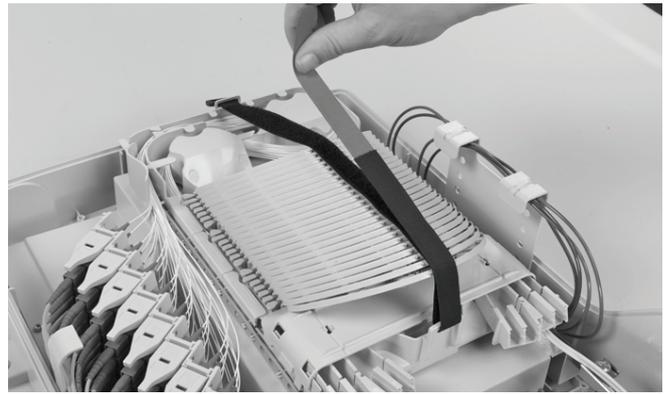

8.2 Close the last tray with the cover and secure the trays with the hook and loop fastener.



8.3 Closing the box.

To find out more about CommScope® products, visit us on the web at www.commscope.com

For technical assistance, customer service, or to report any missing/damaged parts, visit us at:
<http://www.commscope.com/SupportCenter>

© 2017 CommScope, Inc. All rights reserved.

RECORDsplice, SMOUV and all trademarks identified by ® or ™ are registered trademarks or trademarks, respectively, of CommScope, Inc.

This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to CommScope products or services.

This product is covered by one or more U.S. patents or their foreign equivalents. For patents, see:
www.commscope.com/ProductPatent/ProductPatent.aspx.