


REV	MCO	DWN	DATE
A	20307399	RCR	23-MAY-11
B	8000019215	NERI	25-JAN-17

THE T-BOLT IS DESIGNED TO FIT THROUGH THE SLOT IN THE CONVERSION BRACKET AND INTO THE CHANNEL ON THE COMMSCOPE FIBER GUIDE. WHEN THE T-BOLT IS IN THE CHANNEL OF THE FIBER GUIDE TURN IT CLOCKWISE AND TIGHTEN THE NUT.

THE COMMSCOPE FIBER GUIDE IS TO BE PLACED INSIDE OF THE SLOTTED TABS ON THE CONVERSION BRACKET. YOU WILL HAVE TO GENTLY SQUEEZE THE TOP TO THE FIBER GUIDE TO FIT IT INTO THE BRACKET.

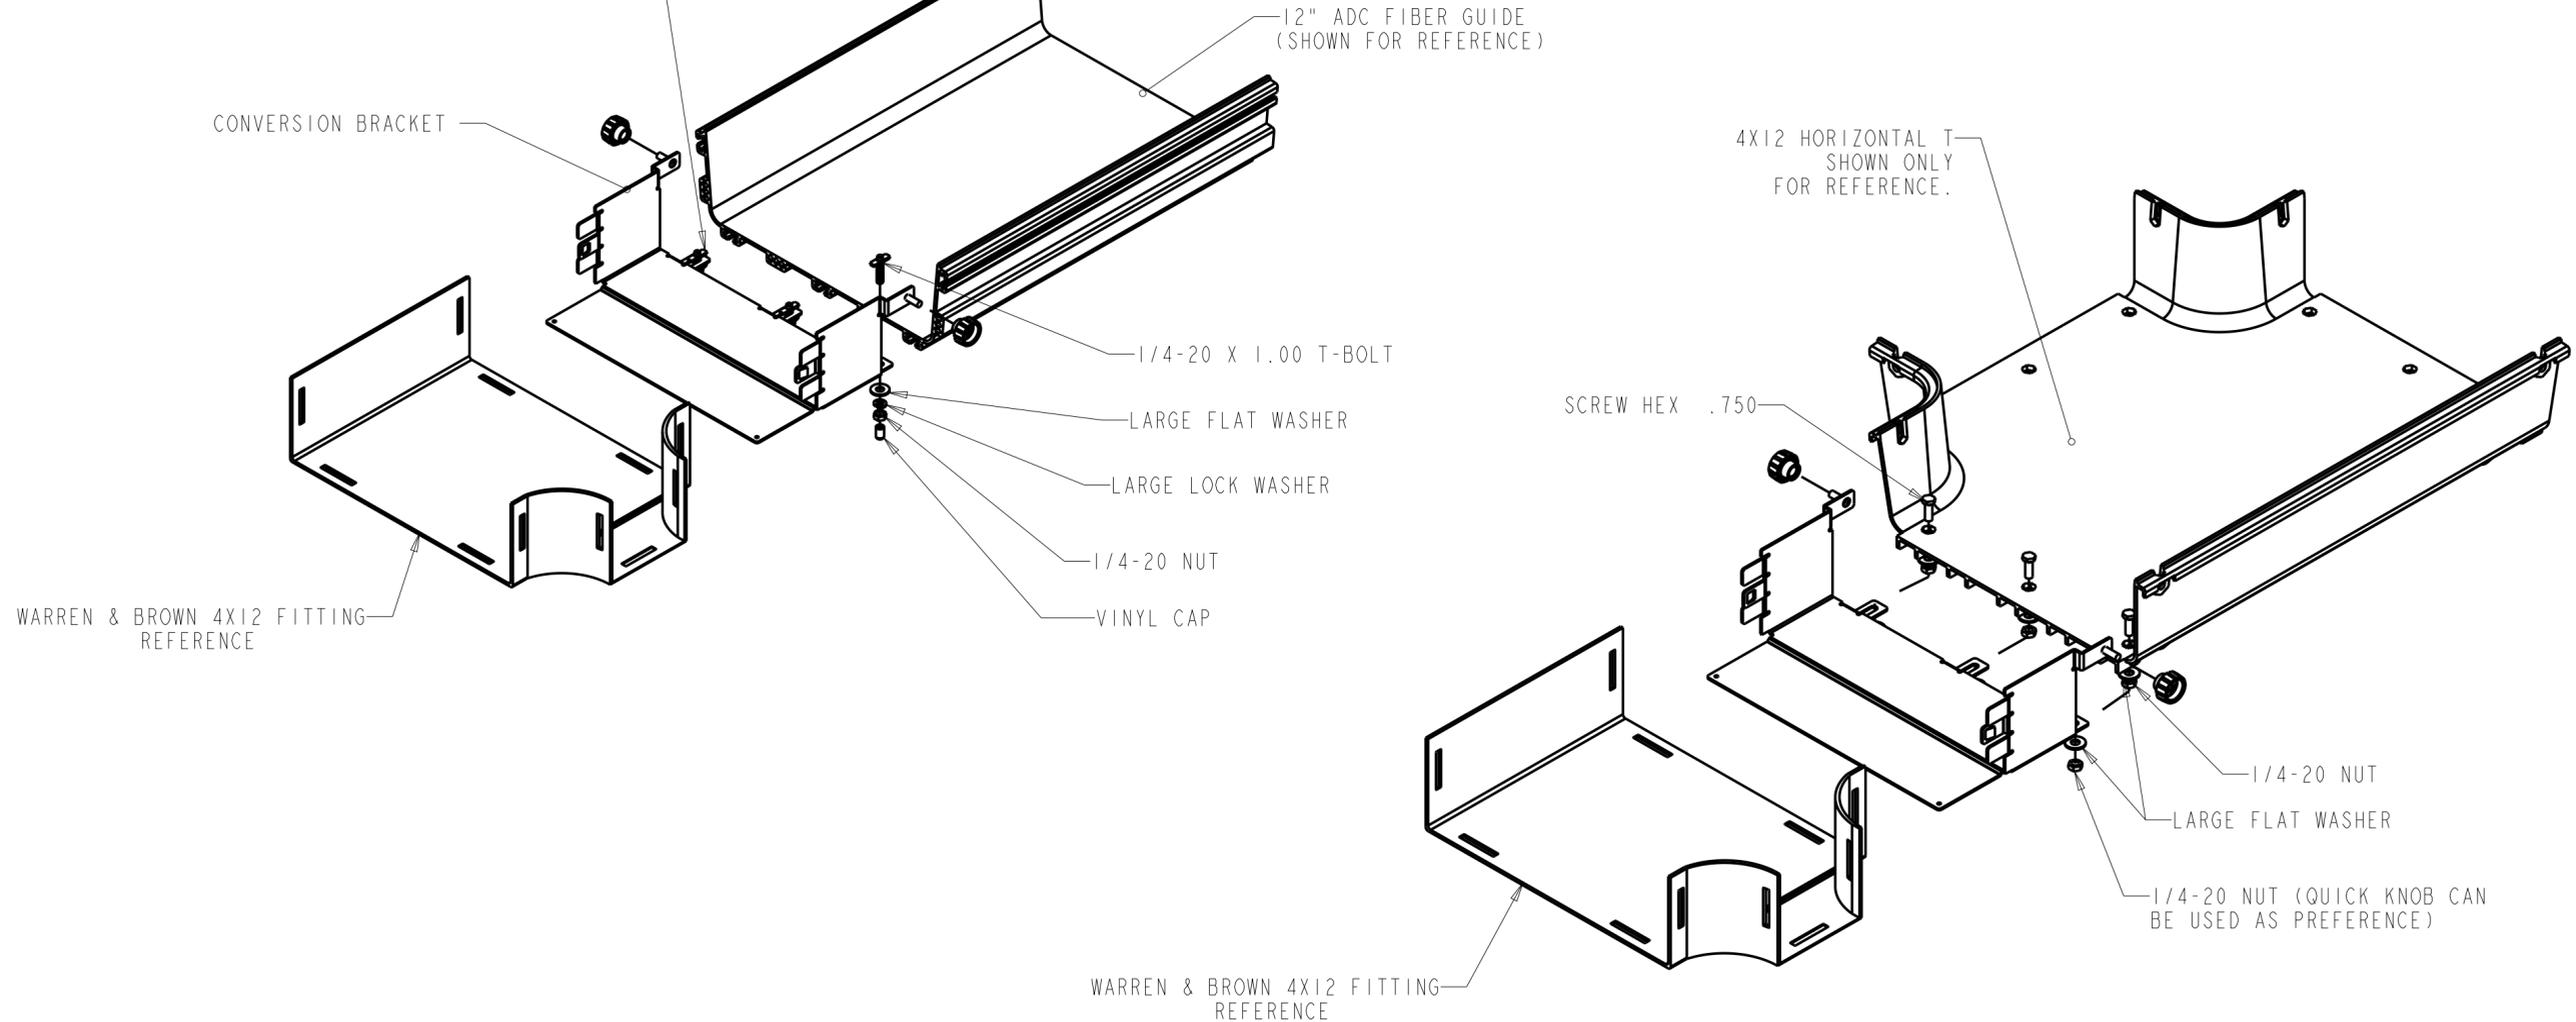

NOTES:



1. PARTS INCLUDED WITH KIT ARE AS FOLLOW:

- (1) CONVERSION BRACKET
- (3) 1/4-20 HEX SCREW
- (5) KNOB PLASTIC
- (3) 1/4-20 X 1.00 T-BOLT
- (6) LARGE FLAT WASHER
- (3) LARGE SPLIT LOCK WASHER
- (6) 1/4-20 NUT
- (3) VINYL CAP

NOTE: EXTRA PARTS CAN BE INCLUDED.

ATTACHING THE ADAPTER TO THE WARREN & BROWN LINK:

- 2. MATE THE ADAPTER TO THE WARREN & BROWN COMPONENT AS SHOWN. SIDES OF THE ADAPTER WILL NEED TO BE SQUEEZED INWARD SLIGHTLY.
- 3. MATE THE ADAPTER TO THE COMMSCOPE GUIDE WITH KNOBS AND 1/4-20 SREW AND NUT.
- 4. CUT AND APPLY TAPE ALONG SEAMS WHERE THE ADAPTER MEETS THE TROUGH IF IT IS REQUIRED.

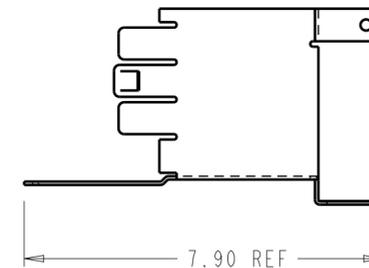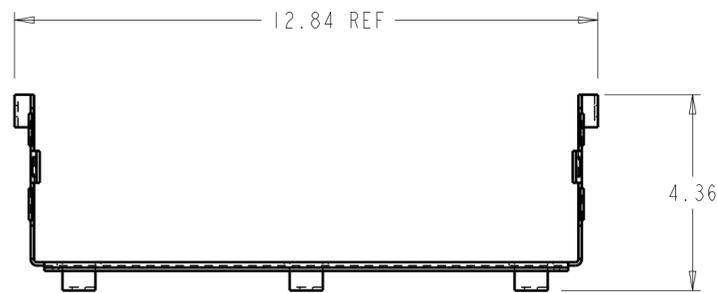

COMMSCOPE, INC.

CATALOG#: FGS-ACC089

© 2016 COMMSCOPE, INC. CONFIDENTIAL NOTICE: THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPRIETARY PROPERTY OF COMMSCOPE, INC. AND MAY BE USED ONLY FOR THE SPECIFIC PURPOSE AUTHORIZED IN WRITING BY COMMSCOPE, INC.		TITLE KIT, 12"WARREN ADAPTER (INSTALLATION DRAWING)	
ALL DIMS AND TOLERANCES ARE INCHES UNLESS OTHERWISE SPECIFIED	.XX:±N/A .XXX:±N/A ANGULAR:±N/A	C SIZE	DRAWING NUMBER 300001727259
DO NOT SCALE DRAWING		ENGR: ERIK ESTRADA DWN: R. CAZARES	B REV
		SHT. 1 OF 1	

DIMENSIONS IN INCHES  
THIRD ANGLE PROJECTION