
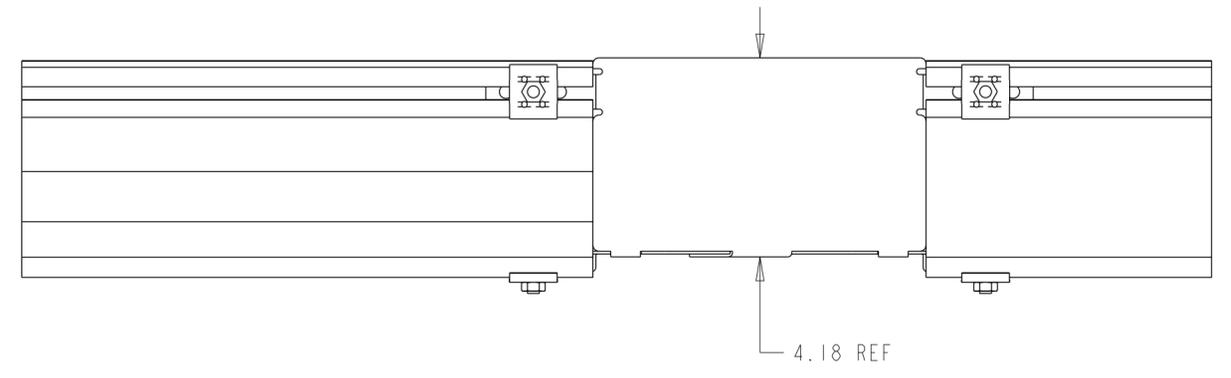
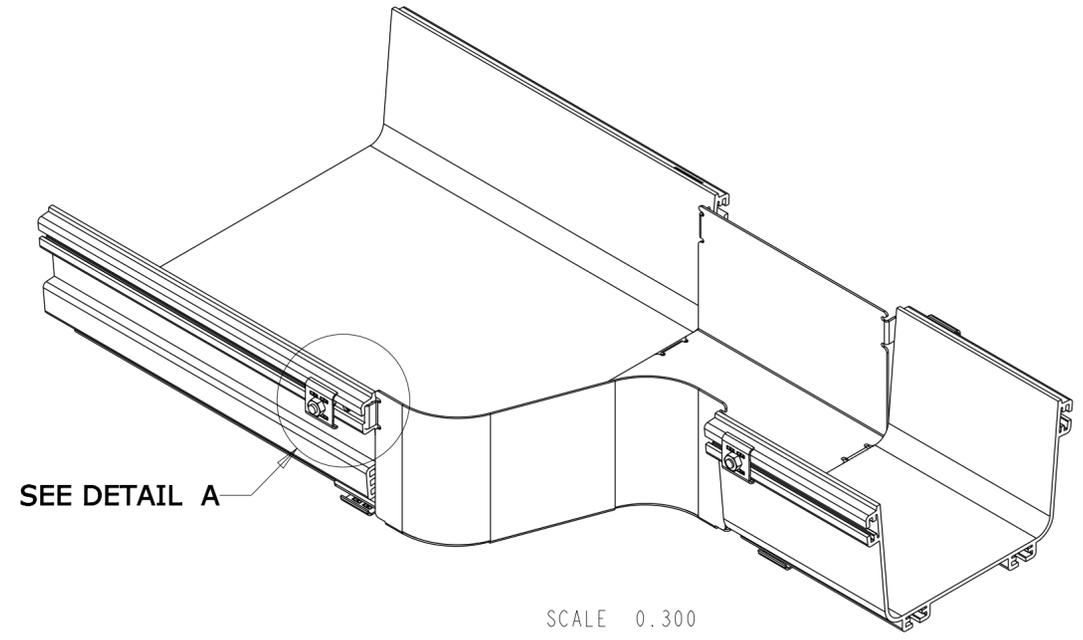


REVISIONS			
REV	CMO	DATE	APPROVED
C	20077621	15-DEC-2000	CD2
D	40118634CMO	29-SEP-2020	ODVL

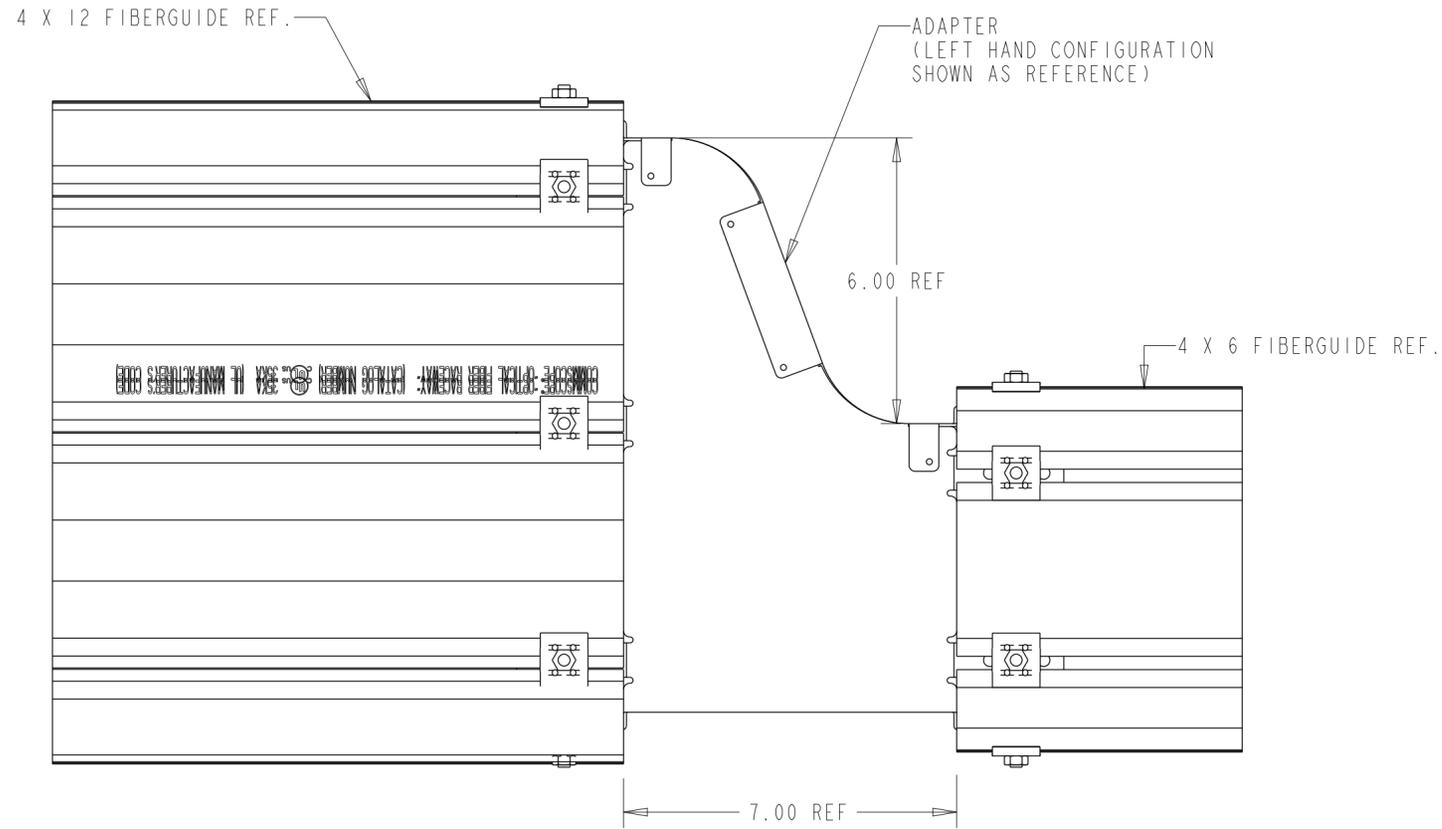


NOTES:

1. PARTS INCLUDED WITH KIT ARE AS FOLLOWS:
 (1) ADAPTER
 (9) 1/4-20 SCREW
 (9) 1/4-20 NUT
 (9) RETAINING WASHER

ASSEMBLY INSTRUCTIONS:

1. INSERT THE (9) 1/4-20 SCREWS INTO THE TAB HOLES ON THE ADAPTER, ONE SCREW PER TAB, WITH THE SCREW HEADS ON THE INSIDE OF THE ADAPTER.
2. SLIDE THE TABS WITH THE ASSEMBLED SCREWS COMPLETELY INTO THE T-CHANNELS ON THE 12" AND 6" FIBERGUIDE STRAIGHT SECTIONS. (SEE DETAIL A)
3. ASSEMBLE THE (9) RETAINING WASHERS, AND THE (9) 1/4-20 NUTS OVER THE (9) SCREWS, AND TIGHTEN THE NUTS COMPLETELY.

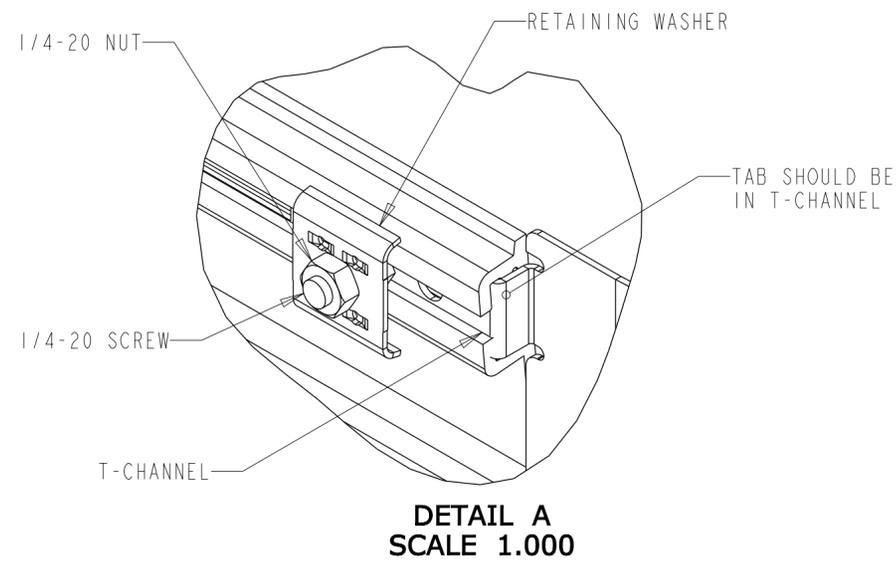

FGS-MDSA-FB-R-Y	6" EXIT RIGHT	YELLOW
FGS-MDSA-FB-L-Y	6" EXIT LEFT	YELLOW
FGS-MDSA-FB-R	6" EXIT RIGHT	BLACK
FGS-MDSA-FB-L	6" EXIT LEFT	BLACK
CATALOG NUMBER	CONFIGURATION	COLOR

COMMSCOPE, INC.			
DRAFTER CRAIG ZELASKO		TITLE 12-6" FGS SIDE IN LINE ADAPTER INST DWG	
ENGINEER KEVIN HRUBY	SIZE A2	SCALE 1.000	DOCUMENT NO. 1080171 ADC
CUSTOMER DRAWING			REVISION D
			SHEET 1 OF 1