

3

4

5


Ť

PARTS LIST DESCRIPTION QTY LOW PROFILE EXPRESS EXIT COVER, LOW PROFILE EXPRESS EXIT BRACKET, FIBER RETAINING 2 BRACKET, LOW PROFILE EXPRESS EXIT BRACKET, EXTENSION QUICK KNOB ASSEMBLY 4 SCREW, 6-32 X .25 4

2

G

SAP-ENTERPRISE-A2-2016-3RD, FRM

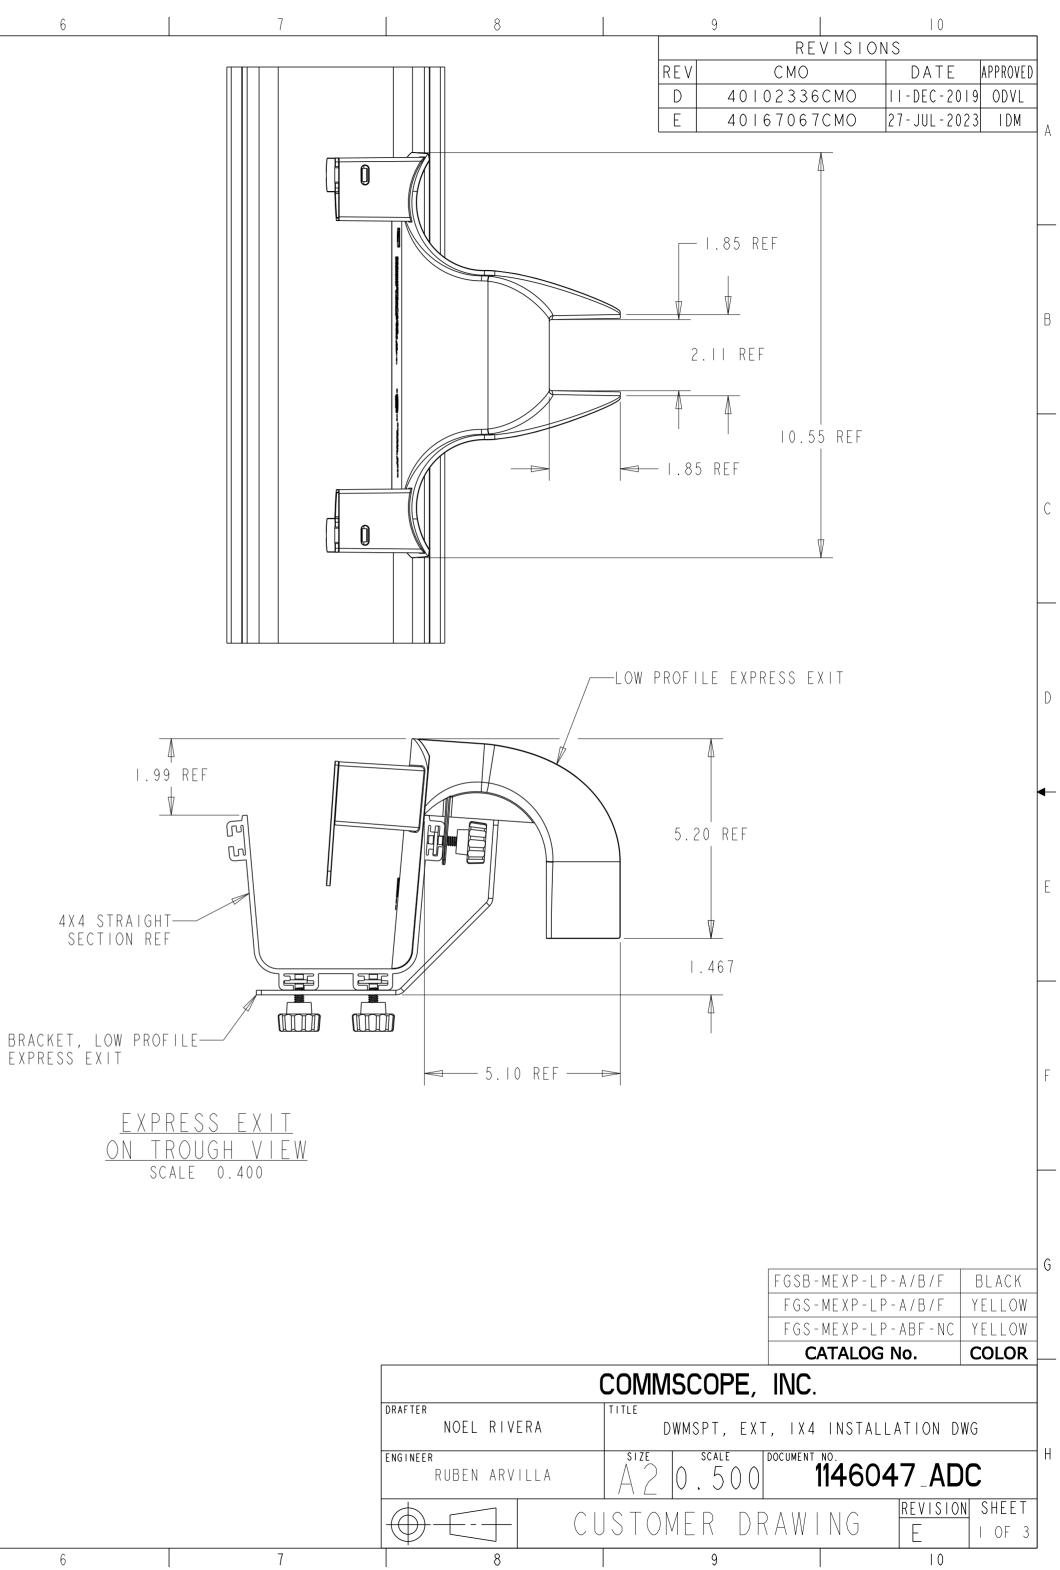

		· · · · · · · · · · · · · · · · · · ·
А	STRAIGHT SECTION REF	LOW PROFILE I
	T-SLOT	T
В		
	BRACKET	
С		
	QUICK KNOB	
	ASSEMBLY	
D		4X4 STRAIGHT SECTION REF —— /
U		
->		
E		
		QUICK KNOW ASEMBLY (4)
F		
	INSTALLATION INSTRUCTIONS: I. PLACE LOW PROFILE EXPRESS EXIT ON STRAIGHT SECTION AS SHOWN.	
	2. LIFT ONE END OF LOW PROFILE EXPRESS EXIT AND INSTALL QUICK KNOBS	
G	INTO T-SLOT, LOWER EXPRESS EXIT ONTO STRAIGHT SECTION. REPEAT FOR OTHER SIDE. ROTATE QUICK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SOLT. LOSSELY HAND TIGHTEN QUICK KNOBS. SEE DETAIL A	
	*WARNING: IF LOW PROFILE EXPRESS EXIT IS REMOVED FROM STRAIGHT SECTION WHILE QUICK KNOBS ARE INSTALLED, QUICK KNOBS WILL FALL OUT.	
	3. ATTACH EXTENSION BRACKET TO LOW PROFILE EXPRESS EXIT BRACKET USING 6-32 X .25 LONG SCREWS. (4X6 AND 4XI2 STRIGHT SECTIONS ONLY)	
Н	4. INSERT QUICK KNOBS THROUGH BRACKET, ROTATE 90 AND INTO T-SLOT IN STRAIGHT SECTION WHILE INSERTING INTO SLOT ON THE LOW PROFILE EXPRESS EXIT. ROTATE QIUCK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SLOT. SEE DETAIL A.	
	5. TIGHEN (4) QUICK KNOBS COMPLETELY.	
SAP-ENTER	ря155-A2-2016-380, ГЕМ 3	4 5 <b>†</b>

