

COMMSCOPE Trough Divider Moulding Instructions

General

The **COMMSCOPE** divider moulding kit can be used to separate fiber patch cords between sliding pair trays on both UD and HD sliding shelves. Each moulding is supplied with double sided self-adhesive tape installed.

Ordering information is listed below:

Material ID	Part No.	Description
760236106	UD-HD-DIVIDER	Kit, trough divider moulding



How to Contact Us

- To find out more about **CommScope**® products, visit us on the web at <http://www.commscope.com/>
- For technical assistance:
 - Within the United States, contact your local account representative or technical support at 1-800-344-0223. Outside the United States, contact your local account representative or **PartnerPRO**™ Network Partner.
 - Within the United States, report any missing/damaged parts or any other issues to **CommScope** Customer Claims at 1-866-539-2795 or email to claims@commscope.com. Outside the United States, contact your local account representative or **PartnerPRO** Network Partner.

Tools Required

- Isopropyl Alcohol (IPA)
- Lint-free cloth or tissues

Parts List

Verify parts against the parts list below:

Quantity	Description
6	Divider Mouldings
1	Instruction sheet


⚠ Important Safety Cautions

- To reduce the risk of fire, electric shock, and injury to persons, read, understand, and adhere to the following instructions as well as any warnings marked on the product.
- Remote risk of electric shock. Never install the product in wet conditions or during lightning storms. Never touch uninsulated communication wires or terminals.
- Disconnected optical components may emit invisible optical radiation that can damage your eyes. Never look directly into an optical component that may have a laser coupled to it. Serious and permanent retinal damage is possible. If accidental exposure to laser radiation is suspected, consult a physician for an eye examination.
- Wearing safety glasses during installation of this shelf is recommended. Although standard safety glasses provide no protection from potential optical radiation, they offer protection from accidental airborne hardware and cleaning solvents.

Precautions

- Isopropyl alcohol is flammable, and can cause eye irritation on contact. If eye contact occurs, flush with water for at least 15 minutes. In case of ingestion, consult a physician. Use only in well ventilated areas

Step 1 – Install Divider Mouldings (for both UD and HD versions of shelf)

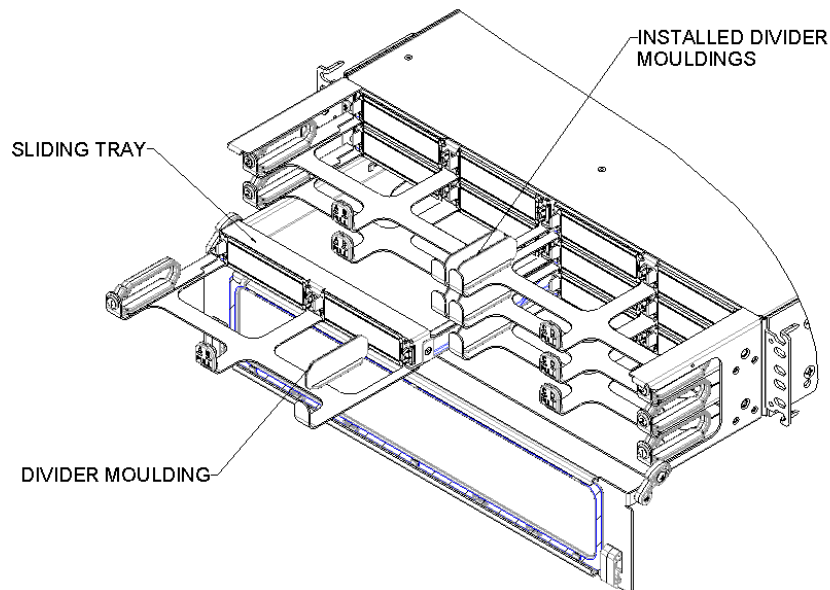

1. Open door of shelf and pull out required sliding tray.
2. Wipe surface of sliding tray (where the moulding is to be installed) with Isopropyl alcohol (IPA) using a lint free cloth or tissue.
3. Peel off paper backing from adhesive strip on moulding.
4. Locate moulding on sliding tray of shelf and press firmly to create good adhesion.
5. Repeat items 1-4 for remaining mouldings, if desired.